


TRANSPORT PC PRO MAGNETIC UPRIGHT BIKE ITEM NO.: 20697

LifeGear
Get active for life

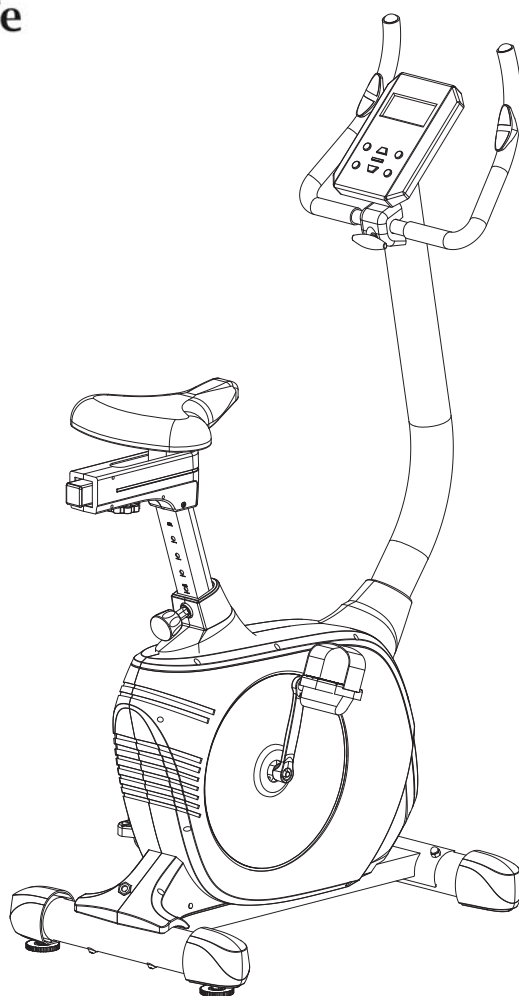

OWNER'S MANUAL

***IMPORTANT: Read all instructions carefully before using this product. Retain this owner's manual for future reference.
The specifications of this product may vary from this photo, subject to change without notice.***

TABLE OF CONTENTS

WARRANTY -----	2
IMPORTANT SAFETY INSTRUCTIONS -----	3
PARTS LIST -----	4
HARDWARE PACKING LIST -----	6
TOOLS -----	6
OVERVIEW DRAWING -----	7
ASSEMBLY INSTRUCTIONS -----	8
OPERATING THE COMPUTER -----	14
ADJUSTMENTS -----	19
MAINTENANCE -----	20
TROUBLESHOOTING -----	20
WARM UP AND COOL DOWN ROUTINE -----	21

ONE YEAR LIMITED WARRANTY

LifeGear Inc. warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has been installed and operated in accordance with LifeGear's Owner's Manual. LifeGear's obligation under this warranty is limited to replacing or repairing free of charge, any parts which may prove to be defective under normal home use. This warranty does not include any damage caused by improper operation, misuse or commercial application.

From the date of purchase, the frame is warranted to be free from defects for 1 (one) year.

This warranty is offered only to the original owner and is not transferable. Proof of purchase is required.

When ordering replacement parts please have the following information ready:

1. **Owner's Manual**
2. **Model Number**
3. **Description of Parts**
4. **Part Number**
5. **Date of Purchase**

IMPORTANT SAFETY INSTRUCTIONS

Basic precautions should always be followed, including the following important safety instructions when using this equipment. Read all instructions before using this equipment.

1. Read all instructions and follow it carefully before using this equipment. Make sure the equipment is properly assembled and tightened before use.
2. Before exercise, in order to avoid injuring the muscle, warm-up exercises are recommended.
3. Please make sure all parts are not damaged and fixed well before use. This equipment should be placed on a flat surface when using. Using a mat or other covering material on the ground is recommended.
4. Please wear proper clothes and shoes when using this equipment; do not wear clothes that may catch any part of the equipment; remember to tighten the pedaling straps.
5. Do not attempt any maintenance or adjustments other than those described in this manual. Should any problems arise, discontinue use and consult your local dealer.
6. Do not use the equipment outdoors.
7. This equipment is for household use only. It is not a commercial model.
8. Only one person at a time should use this equipment.
9. If you feel any chest pains, nausea, dizziness, or short of breath, you should stop exercising immediately and consult your physician before continuing.
10. Care should be taken in mounting or dismounting the equipment.
11. Do not allow children to use or play on the equipment. Keep children and pets away from the equipment while in use. This machine is designed for adults use only. The minimum free space required for safe operation is not less than two meters.
12. The maximum weight capacity for this product is 120 kgs.

WARNING: Before beginning any exercise program consult your physician.

This is especially important for the people who are over 35 years old or who have pre-existing health problems. Read all instructions before using any fitness equipment.

CAUTION: Read all instructions carefully before operating this product. Retain this Owner's Manual for future reference.


PARTS LIST

No.	Description	Qty	No.	Description	Qty
001	Computer (SM-3710)	1	023	Seat Cushion DD-353T	1
002	Computer Extension Wire I (L=500 mm)	1	024	Seat Sliding Tube End Cap 38x38	2
003	Computer Extension Wire II (L=1000 mm)	1	025	Nylon Nut M8	5
004	Handlebar Ø25x1.5t	1	026	Washer Ø16xØ8x1.5t	5
005	Handlebar Foam Grip Ø27xØ33x730	2	027	Cross Recessed Pan Head Tapping Screw ST2.9x16	5
006	Hand Pulse Sensor with Wire L=750mm	2	028	Seat Sliding Tube Bolt	1
007	Cross Recessed Pan Head Tapping Screw ST4.2x20	4	029	Big Washer Ø8xØ20x2.0t	1
008	Wire Grommet Ø12.1	1	030	Seat Adjustment Knob M8	1
009	Handlebar T-Knob M8x55	1	031	Seat Post	1
010	Spacer Ø12x1.5x20	1	032	Seat Post Cover	1
011	Cross Recessed Pan Head Tapping Screw ST2.9x12	2	033	Seat Height Adjustment Knob M16x1.5	1
012	Clamp Cover	1	034	Seat Post Bushing	1
013	Hexagon Nut M12x3t	1	035	Motor Tension Cable	1
014	Handlebar Post Ø76x2.0x946	1	036	Hexagon Socket Pan Head Cap Bolt M8x18	1
015	Handlebar End Cap Ø25	2	037	Idle Wheel Bracket	1
016	Motor	1	038	Idle Wheel	1
017	Power Supply Wire	1	039	Transport Wheel Ø45x19	2
018	AC Adapter	1	040	Cross Recessed Pan Head Bolt M6x40	2
019	Hexagon Socket Pan Head Cap Bolt M8x15	6	041	Nylon Nut M6	6
020	Curve Washer Ø8xØ16x1.5t	6	042R	Front Right Stabilizer End Cap	1
021	Handlebar Post Cover	1	042L	Front Left Stabilizer End Cap	1
022R	Right Seat Sliding Tube Cover	1	043	Front Stabilizer Ø76x1.5tx430	1
022L	Left Seat Sliding Tube Cover	1	044	Carriage Bolt M8x90	2

PARTS LIST

No.	Description	Qty	No.	Description	Qty
045	Big Curve Washer Ø8xØ20x2.0t	4	060	Eyebolt M6x36	2
046	Cap Nut M8	2	061	Flywheel Ø250	1
047	Washer Ø6xØ12x1.0t	8	062	Spring Clip Ø17	2
048	Main Frame	1	063	Bearing 6003ZZ	2
049R	Right Foot Pedal YH-30X	1	064	Sensor with Wire L=750 mm	1
049L	Left Foot Pedal YH-30X	1	065	Belt Pulley 260J6	1
050	Crank Cover	2	066	Belt PJ 410 J6	1
051	Nut M10x1.25x10	2	067	Belt Pulley Shaft	1
052R	Right Crank	1	068	Cross Recessed Pan Head Bolt M6x15	4
052L	Left Crank	1	069	Cross Recessed Pan Head Tapping Screw ST4.2x25	8
053	Cover Cap Ø40xØ25x10	2	070	Hexagon Nut M10	2
054R	Right Shroud	1	071	Adjustable Leveler M10	2
054L	Left Shroud	1	072	Hexagon Socket Pan Head Cap Bolt M8x90	2
055	Screw ST4.2x25	8	073	Rear Stabilizer End Cap Ø76	2
056	Nut M6	2	074	Rear Stabilizer Ø76x1.5tx480	1
057	Spring Washer Ø6	2	075	Spring Ø17x80xØ2.5	1
058	Tension Bracket	2	076	Seat Sliding Tube	1
059	Nut M10x1.0x10t	2	077	Cross Recessed Pan Head Bolt M5x12	4

HARDWARE PACKING LIST



(7) Cross Recessed Pan Head
Tapping Screw ST4.2x20
2 PCS




(27) Cross Recessed Pan Head
Tapping Screw ST2.9x16
5 PCS



(45) Big Curve Washer
Ø8xØ20x2.0t
4 PCS



(44) Carriage Bolt M8x90
2 PCS



(46) Cap Nut M8
2 PCS




(72) Hexagon Socket Pan
Head Cap Bolt M8x90
2 PCS


TOOLS



Allen Wrench S6
1 PC

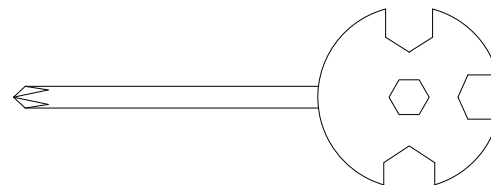


Multi Hex Tool with Phillips Screwdriver
S10, S13, S14, S15
1 PC

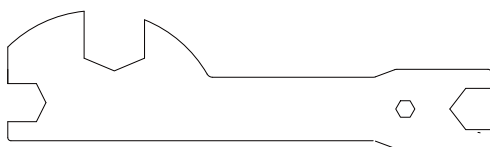


Multi Hex Tool
S10, S13, S17, S19
1 PC


OVERVIEW DRAWING

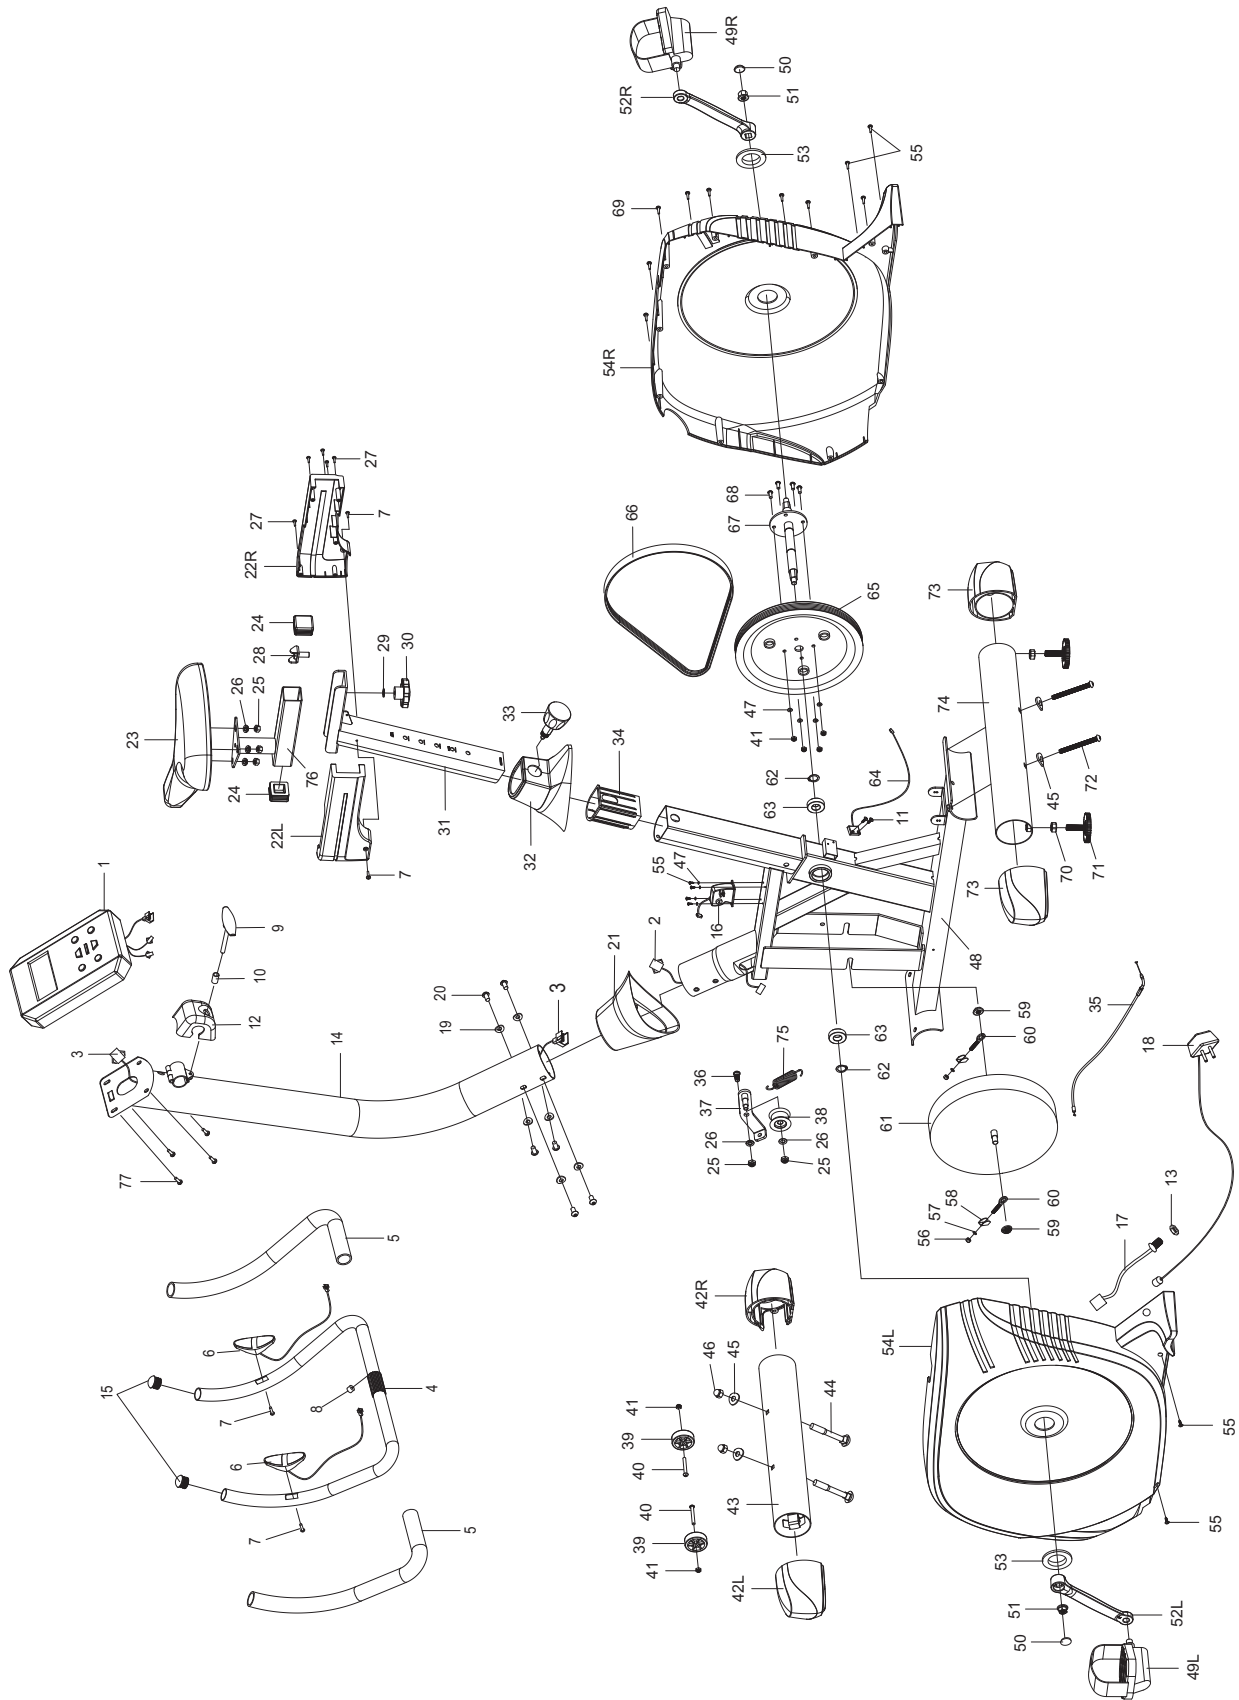

ASSEMBLY INSTRUCTIONS

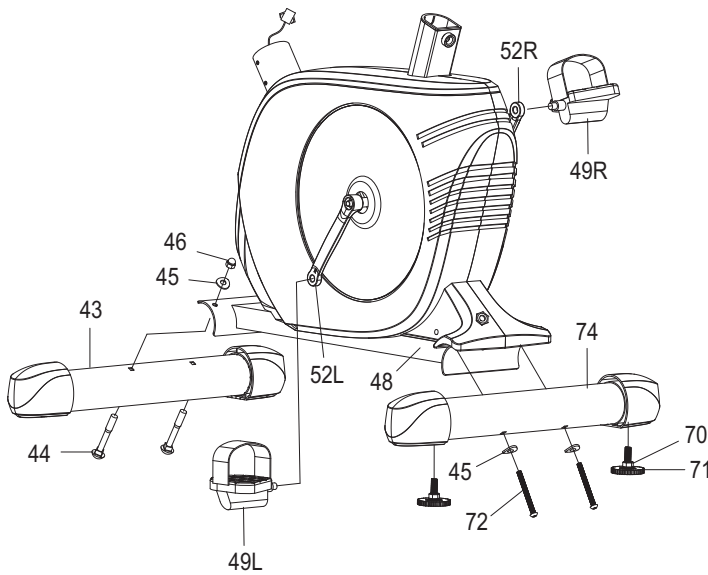

Tool:

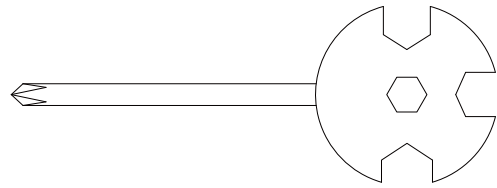

*Multi Hex Tool with Phillips Screwdriver
S10, S13, S14, S15*



Allen Wrench S6

1. Front/Rear Stabilizers and Right/Left Foot Pedals Installation

Position the Front Stabilizer (43) in front of Main Frame (48) and align bolt holes. Attach the Front Stabilizer (43) onto the front curve of the Main Frame (48) with two M8x90 Carriage Bolts (44), two Ø8xØ20x2.0t Big Curve Washers (45), and two M8 Cap Nuts (46). Tighten cap nuts with the Multi hex Tool with Phillips Screwdriver provided. Position the Rear Stabilizer (74) behind the Main Frame (48) and align bolt holes. Attach the Rear Stabilizer (74) onto the rear curve of the Main Frame (48) with two M8x90 Hexagon Socket Pan Head Cap Bolts (72) and two Ø8xØ20x2.0t Big Curve Washers (45). Tighten bolts with the S6 Allen Wrench provided. Install two M10 Adjustable Levelers (71) with two M10 Hexagon Nuts (70) onto the Rear Stabilizer (74).

Foot Pedals Installation

The Cranks, Foot Pedals, Pedal Shafts and Pedal Straps are marked “R” for Right and “L” for Left.

Insert the pedal shaft of Left Foot Pedal (49L) into threaded hole in the Left Crank (52L). Turn the pedal shaft by hand in the counter-clockwise direction until snug.

Note: DO NOT turn the pedal shaft in the clockwise direction, doing so will strip the threads.

Tighten the pedal shaft of Left Foot Pedal (49L) with the Multi Hex Tool with Phillips Screwdriver provided.

Insert pedal shaft of Right Foot Pedal (49R) into threaded hole in Right Crank (52R). Turn the pedal shaft by hand in the clockwise direction until snug.

Tighten pedal shaft of Right Foot Pedal (49R) with the Multi Hex Tool with Phillips Screwdriver provided.


Hardware:




(44) Carriage Bolt
M8x90
2 PCS




(45) Big Curve Washer
 $\text{Ø}8 \times \text{Ø}20 \times 2.0\text{t}$
4 PCS




(46) Cap Nut M8
2 PCS




(72) Hexagon Socket Pan
Head Cap Bolt M8x90
2 PCS

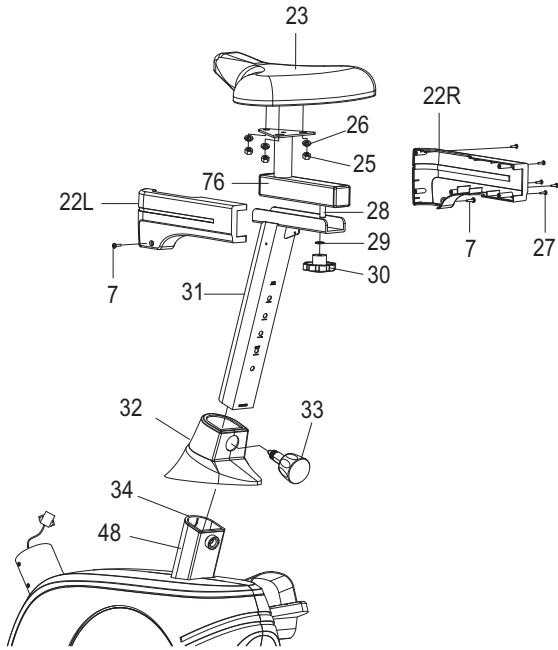

Tool:

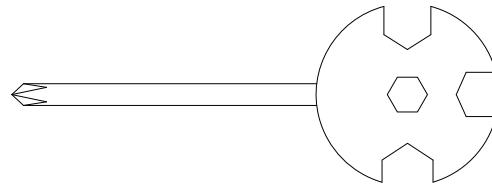

*Multi Hex Tool with Phillips Screwdriver
S10, S13, S14, S15*

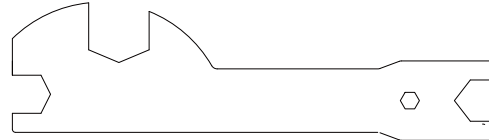

*Multi Hex Tool
S10, S13, S17, S19*


2. Seat Post, Seat Cushion, Seat Sliding Tube, and Seat Sliding Tube Covers Installation

Slide the Seat Post Cover (32) onto the tube of the Main Frame (48). Insert the Seat Post (31) into the Seat Post Bushing (34) on the tube of the Main Frame (48) and then attach the Seat Height Adjustment Knob (33) onto the tube of the Main Frame (48) by turning it in a clockwise direction with Multi Hex Tool provided to lock the Seat Post (31) in the suitable position.

Remove three M8 Nylon Nuts (25) and three Ø16xØ8x1.5t Washers (26) from underside of the Seat Cushion (23). Remove nylon nuts and washers with the Multi Hex Tool with Phillips Screwdriver provided. Guide bolts on underside of the Seat Cushion (23) through holes on top of the Seat Sliding Tube (76), attach with three removed M8 Nylon Nuts (25) and Ø16xØ8x1.5t Washers (26). Tighten nylon nuts and washers with the Multi Hex Tool with Phillips Screwdriver provided. Remove the Ø8xØ20x2.0t Big Washer (29) and Seat Adjustment Knob (30) from the Seat Sliding Tube Bolt (28). Guide the Seat Sliding Tube Bolt (28) on underside of the Seat Sliding Tube (76) through hole on top of the Seat Post (31), attach with the Ø8xØ20x2.0t Big Washer (29) and Seat Adjustment Knob (30) that were removed.

Attach the Left and Right Seat Sliding Tube Covers (22L, 22R) onto the Seat Sliding Tube (76) and Seat Post (31) with five ST2.9x16 Cross Recessed Pan Head Tapping Screws (27) and two ST4.2x20 Cross Recessed Pan Head Tapping Screws (7). Tighten screws with the Multi Hex Tool with Phillips Screwdriver provided.


Hardware:



(7) Cross Recessed Pan Head
Tapping Screw ST4.2x20
2 PCS



(27) Cross Recessed Pan Head
Tapping Screw ST2.9x16
5 PCS

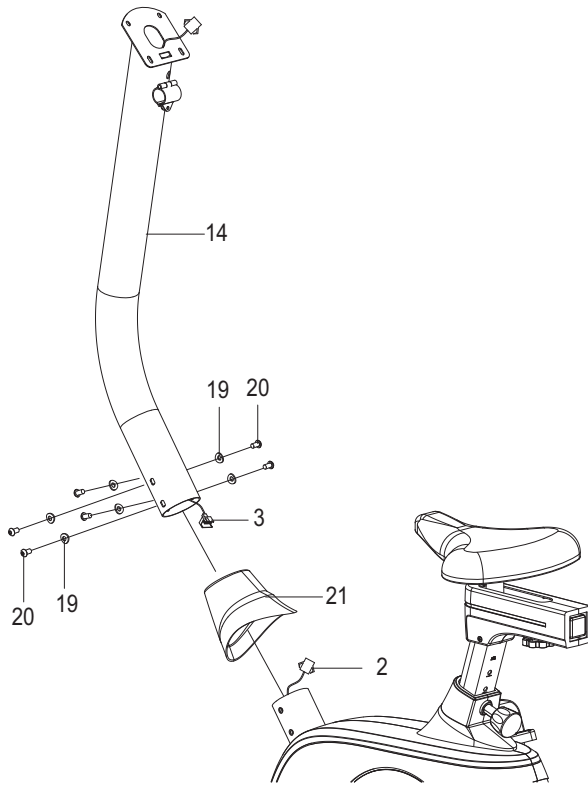

Tool:



Allen Wrench S6

3. Handlebar Post and Handlebar Post Cover Installation


Remove six M8x15 Hexagon Socket Pan Head Cap Bolts (19) and six Ø8xØ16x1.5t Curve Washers (20) from the Main Frame (48). Remove bolts and curve washers with the S6 Allen Wrench provided.

Slide the Handlebar Post Cover (21) up to the Handlebar Post (14).


Connect the Computer Extension Wire I (2) from the Main Frame (48) to the Computer Extension Wire II (3) from the Handlebar Post (14).

Insert the Handlebar Post (14) onto the tube of the Main Frame (48) and secure with six M8x15 Hexagon Socket Pan Head Cap Bolts (19) and six Ø8xØ16x1.5t Curve Washers (20) that were removed. Tighten bolts and curve washers with the S6 Allen Wrench provided.

Slide the Handlebar Post Cover (21) down to the Handlebar Post (14).

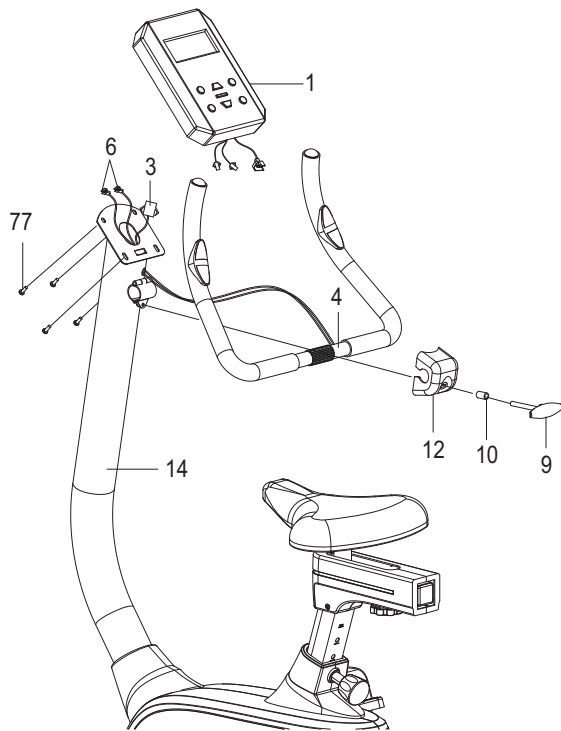

Tool:

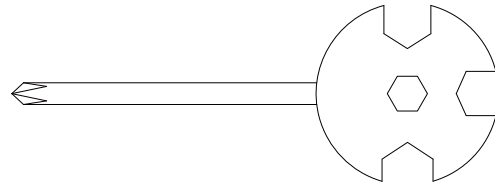

*Multi Hex Tool with Phillips Screwdriver
S10, S13, S14, S15*

4. Handlebar and Computer Installation


Insert the Hand Pulse Sensor Wires (6) into the hole on the Handlebar Post (14) then pull them out from the top end of the Handlebar Post (14).

Place the Handlebar (4) through clamp on the Handlebar Post (14) with hand pulse sensors facing the seat.

Hold the Handlebar (4) in desired position and fasten Clamp Cover (12), Ø12x1.5x20 Spacer (10), and M8x55 Handlebar T-Knob (9) onto clamp. Tighten the M8x55 Handlebar T-Knob (9) after adjustment.

NOTE: Handlebar T-Knob should be tightly secured before using.

Remove four M5x12 Cross Recessed Pan Head Bolts (77) from the back of the Computer (1). Remove bolts with the Multi Hex Tool with Phillips Screwdriver provided. Connect the Hand Pulse Sensor Wires (6) and Computer Extension Wire II (3) to the wires that come from the Computer (1). Tuck wires into the Handlebar Post (14). Attach the Computer (1) onto the top end of the Handlebar Post (14) with four M5x12 Cross Recessed Pan Head Bolts (77) that were removed. Tighten bolts with the Multi Hex Tool with Phillips Screwdriver provided.

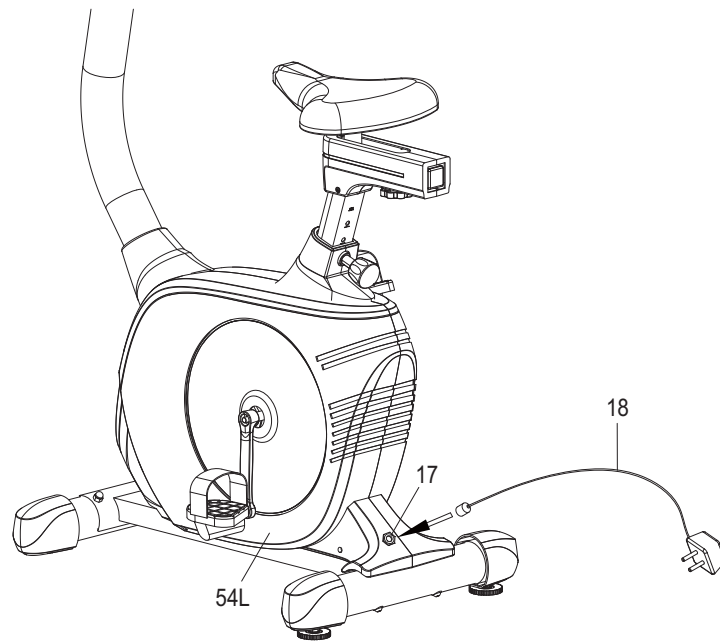

5. AC Adapter Installation

Plug one end of the AC Adapter (18) into the power jack of the Power Supply Wire (17) on the back of the Left Shroud (54L). Before plugging in, make sure to check carefully the specifications on the Adapter. Plug the other end of the AC Adapter (18) into the electrical wall outlet.

OPERATING THE COMPUTER



COMPUTER BUTTON FUNCTIONS:

START/STOP: To start and stop the workout session.

UP: Press the UP button to select the exercise mode of MANUAL, PROGRAM, USER PROGRAM, and H.R.C., and WATT PROGRAM.

Press the UP button to make upward for function values adjustment on different training mode.

Press the UP button to increase the load level.

DOWN: Press the DOWN button to select the exercise mode of MANUAL, PROGRAM, USER PROGRAM, and H.R.C., and WATT PROGRAM.

Press the DOWN button to make downward for function values adjustment on different training mode.

Press the DOWN button to decrease the load level.

RECOVERY: The Pulse Recovery is for personal orientation and compares the approximate pulse rate before and after training. You will notice that your fitness will improve with regular exercise. This feature can help you on your way to a healthier you. The Pulse Recovery feature is to be used directly after your workout. To use this function:

1) Grip the hand pulse sensors with both hands during exercise.

2) Press the **RECOVERY** button.

3) Grip the hand pulse sensors with both hands.

4) The time will countdown from 60 to 0 seconds.

5) Your personal fitness Pulse Recovery level will appear on the display. When countdown is complete, the Pulse Recovery grade will be displayed.

Your ratings for Pulse Recovery are as follows:

F1 = Excellent **F4 = Below Average**

F2 = Good **F5 = Not Good**

F3 = Fair **F6 = Poor**

6) Press the **RECOVERY** button to quit the recovery mode.

RESET: Press the RESET button to reset the functional values to zero

Press and hold the RESET button for over 2 seconds, the computer screen will display initial image (U1..., or U4).

MODE: To confirm your selection.

BODY FAT: To test your body fat percentage and BMI. Press the BODY FAT button and then grip the hand pulse sensors with both hands for a few seconds, and the screen will display your BMI, body fat percentage, and fat symbol.

NOTE: Body Fat Percentage is an estimate based on the sex, age, height, and weight input, and is to be used as a guide only.

B.M.I. (Body mass index) integrated

B.M.I SCALE	LOW	LOW/MED	MEDIUM	MED/HIGH
RANGE	<20	20-24	24.1-26.5	>26.5

BODY FAT:

SYMBOL	—	+	▲	◆
FAT% SEX	LOW	LOW/MED	MEDIUM	MED/HIGH
MALE	<13%	13%-25.9%	26%-30%	>30%
FEMALE	<23%	23%-35.9%	36%-40%	>40%

COMPUTER DISPLAY FUNCTIONS:

TIME: Displays the workout time. TIME will count down if it is set as a “goal”.

SPEED: Displays the workout speed.

RPM: Display current training rotation per minute.

WATT: Displays the workout power consumption.

LOAD: Indicates the load level selected from LEVEL 1 to LEVEL 16.

LOAD PROFILES: There are 20 columns of load bars, and 8 bars in each column. Each bar represents 2 levels of load.

PULSE: Displays the user’s current heart rate (beats per minute).

DISTANCE: Displays the estimated distance traveled. DISTANCE counts down if it is set as a “goal”.


CALORIES: Displays the estimated Calories the user has burned during the exercise. CALORIES count down if it is set as a “goal”.

GETTING STARTED:

Plug the wire of the adapter into the power jack, which is located in the rear of the machine and then connect the adapter to the electrical wall outlet. The computer screen will display

U1 with a long BI tone, press the Up or DOWN button to select USER number (U1-U4) and press the MODE button to confirm the user number. Then input USER data (sex, age, height, and weight) by pressing the Up or DOWN button. Press the MODE button to confirm the USER data. The computer screen will display MANUAL mode, press the Up or DOWN button to select function mode and then press the MODE button after one of the modes is selected.

NOTE: U1~U4 user data values will be stored in the memory after setup for future use.

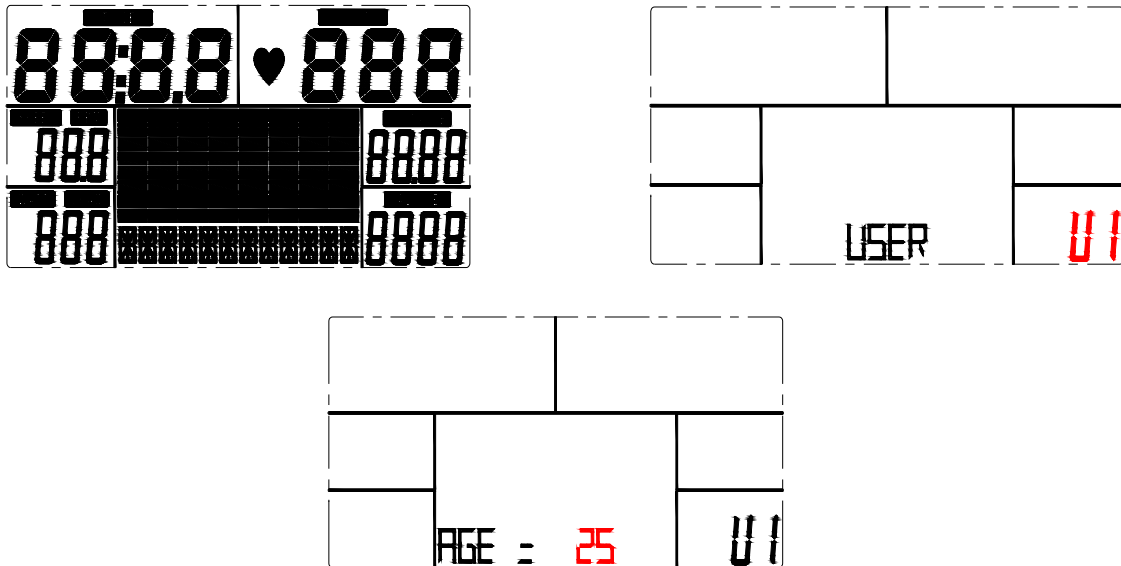

TRAINING IN MANUAL MODE:

You have two options in the MANUAL mode. When the computer screen displays MANUAL mode, press the UP or DOWN button to select the MANUAL mode and then press the MODE button for confirmation. For “quick start,” simply press the START/STOP button and your workout will begin. You can control the load with the UP or DOWN button.


The second option for MANUAL mode is to set a “goal”. When you press the MODE button to select MANUAL mode, the TIME display will flash. If you wish to set a TIME goal, you can do so using UP or DOWN button, or if you wish to set a DISTANCE, CALORIES, or PULSE goal, just continue to press the MODE button. By setting a PULSE goal, a tone will sound that Heart Rate is reached or exceeded. Please grip the hand pulse sensors during exercise. Setting “goals”, you can set “goals” for either TIME, DISTANCE, CALORIES, or PULSE. For instance, if you set a TIME goal of 20:00, once you start the program, you will notice that the TIME display will count down from 20:00 to 0:00. We recommend that you set only one goal (TIME, DISTANCE, CALORIES, or PULSE) for each exercise.

Note, if no goals are set (TIME, DISTANCE, CALORIES, or PULSE) and are all set to 0, all of these values will count up, once the START/STOP key is pressed. During you exercise, when a goal is reached, that display will flash, signaling that your workout is complete.



TRAINING IN PROGRAM MODE:

Press the UP or DOWN button to select the PROGRAM mode and then press the MODE button for confirmation. There are 12 pre-set programs that offer you a variety of workout options. To select a program, use the UP or DOWN button to select one of the pre-set programs. Press the MODE button for confirmation and the TIME display will flash. At this point you can press the START/STOP button to start your workout or you can set a "TIME goal" as described above.

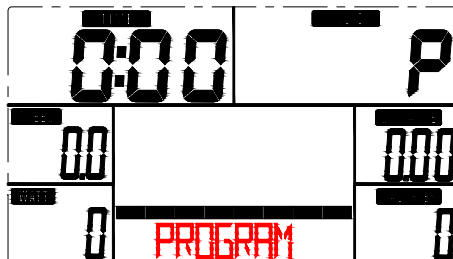

TRAINING IN USER PROGRAM MODE:

Press the UP or DOWN button to select the USER PROGRAM mode and then press the MODE button for confirmation. The first interval of user program graphic will flash for setting the load level. Press the UP or DOWN button to set the load level for the first interval of user program profile. Press the MODE button to confirm the load level for the first interval of user program profile. There are 20 intervals for setting the load level. Repeat above steps to set the load level from the second interval to the twentieth interval. After setting all the load level and then press and hold the MODE button for over 2 seconds, the TIME display will flash. At this point you can press the START/STOP button to start your workout or you can set a "TIME goal" as described in training in manual mode.

TRAINING IN H.R.C. MODE:

Press the UP or DOWN button to select the H.R.C. mode and then press the MODE button for confirmation. There are 4 H.R.C. (Heart Rate Control) programs that offer you a variety of workout options. To select a program, use the UP or DOWN button. If user selects H.R.C. 55 and the target heart rate will display on the split window of PULSE according to user's age because user has inputted USER data (sex, age, height, and weight) after the adapter connected to the electrical wall outlet. Press the MODE button for confirmation. For instance, if user inputs age (25 years old), the calculations will be as follows:

$$220 - 25 = 195$$

$$195 \times 55\% (0.55) = 107 \text{ (55\% of your maximum heart rate)}$$

25 year-old male (THR) Target Heart Rate would be 107

At this point you can press the START/STOP button to start your workout or you can set a "TIME goal" as described in training in manual mode.

After pressing the START/STOP button to exercise, please grip the hand pulse sensors during exercise, the computer will adjust the load level according to the heart rate detected. For example, the load level will increase while the heart rate detected is lower than Target Heart Rate. Also, the load level will decrease while the heart rate detected is higher than Target Heart Rate. As a result, the user's heart rate will be adjusted equal to the Target Heart Rate.

Use the same procedure to operate H.R.C. 75 or H.R.C. 90 as described above.

If user selects H.R.C. TAG and the split window of PULSE will display 100 for the target heart rate. Press the MODE button for confirmation. User may press the UP or DOWN button to set desired Target Heart Rate.

At this point you can press the START/STOP button to start your workout or you can set a "TIME goal" as described in training in manual mode.

After pressing the START/STOP button to exercise, the computer will adjust the load level according to the heart rate detected. For example, the load level will increase while the heart rate detected is lower than Target Heart Rate. Also, the load level will decrease while the heart rate detected is higher than Target Heart Rate. As a result, the user's heart rate will be adjusted to equal the Target Heart Rate.




TRAINING IN WATT PROGRAM MODE:

Press the UP or DOWN button to select the WATT PROGRAM mode and then press the MODE button for confirmation. The split window of WATT will flash for setting. Press the UP or DOWN button to pre-set the watt target. Press the MODE button for confirmation. The Watt constant training program is designed to keep your watt output at a constant level you have pre-set. At this point you can press the START/STOP button to start your workout or you can set a "TIME goal" as described in training in manual mode. After pressing the START/STOP button to exercise, the load level will be automatically adjusted by the computer to close to the pre-set value of watt. If the split window of WATT displays --- symbol, this is to remind you the current WATT is higher or lower than pre-set watt, and you need to slow down or speed up training speed accordingly. Beep tones will sound.

ADJUSTMENTS

Adjusting the Adjustable Leveler

Turn the adjustable leveler on the rear stabilizer as needed to level the upright bike.

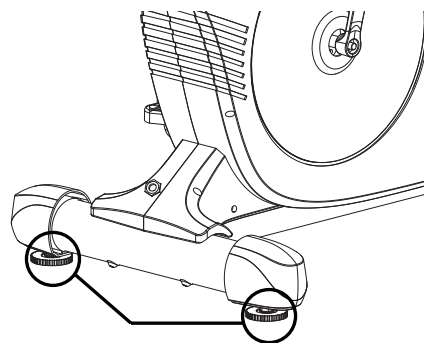


Adjustable Leveler

Adjusting the Seat Forward or Back

Turn the seat adjustment knob to loosen the seat sliding tube. Slide the seat sliding tube forward or back to desired position and turn seat adjustment knob to tighten.

Note: Continue to turn seat adjustment knob until seat sliding tube is secure before exercising.

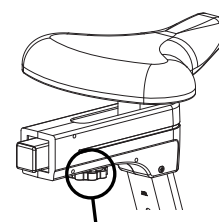


Seat Adjustment Knob

Adjusting the Seat Height

Turn the seat height adjustment knob in a counterclockwise direction until it can be pulled out. Pull out the seat height adjustment knob and then slide the seat post up or down direction to the suitable position. Lock the seat post in place by releasing the seat height adjustment knob and sliding the seat post up or down slightly until the seat height adjustment knob "pops" down into the locked position. For added safety, tighten the seat height adjustment knob in a clockwise direction.

NOTE: When adjusting the height of seat post, make sure the seat post bushing does not exceed the mark line on the seat post.

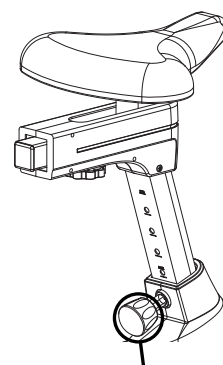


Seat Height Adjustment Knob

Adjusting the Handlebar

Hold the handlebar while loosening the handlebar T-Knob. Adjust the handlebar to the desired position and turn the handlebar T-Knob in a clockwise direction to tighten.

NOTE: Continue to turn the handlebar T-Knob until handlebar is secure before exercising.

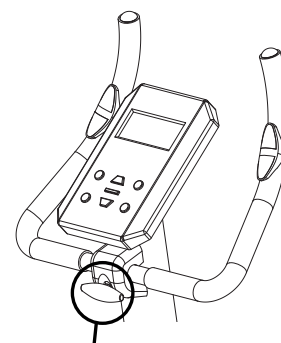

Handlebar T-Knob

MAINTENANCE

Cleaning

The upright bike can be cleaned with a soft clean damp cloth. Do not use abrasives or solvents on plastic parts. Please wipe your perspiration off the upright bike after each use. Be careful not to get excessive moisture on the computer display panel as this might cause an electrical hazard or electronics to fail.

Please keep the upright bike, especially the computer console out of direct sunlight to prevent screen damage.

Please inspect all assembly bolts, nuts, screws, and pedals on the machine for proper tightness every week.

Storage

Store the upright bike in a clean and dry environment away from children.

TROUBLESHOOTING

PROBLEM	SOLUTION
The upright bike wobbles when in use.	Turn the adjustable leveler on the rear stabilizer as needed to level the upright bike.
There is no display on the computer console.	Remove the computer console and verify the wires that come from the computer console are properly connected to the wires that come from the handlebar post.
There is no heart rate reading or heart rate reading or is erratic / inconsistent.	<ol style="list-style-type: none"><li data-bbox="774 1249 1444 1326">1. Make sure that the wire connections for the hand pulse sensors are secure.<li data-bbox="774 1326 1444 1541">2. To ensure the pulse readout is more precise, please always hold on to the handlebar grip sensors with two hands instead of just with one hand only when you try to test your heart rate figures.<li data-bbox="774 1541 1444 1662">3. Gripping the hand pulse sensors too tight. Try to maintain moderate pressure while holding onto the hand pulse sensors.
The upright bike makes a squeaking noise when in use.	The bolts may be loose on the upright bike, please inspect the bolts and tighten the loose bolts.


WARM UP AND COOL DOWN ROUTINE

The **WARM-UP** is an important part of any workout. The purpose of warming up is to prepare your body for exercise and to minimize injuries. Warm up for two to five minutes before aerobic exercising. It should begin every session to prepare your body for more strenuous exercise by heating up and stretching your muscles, increasing your circulation and pulse rate, and delivering more oxygen to your muscles.

COOL DOWN at the end of your workout, repeat these exercises to reduce soreness in tired muscles. The purpose of cooling down is to return the body to its resting state at the end of each exercise session. A proper cool-down slowly lowers your heart rate and allows blood to return to the heart.


HEAD ROLLS

Rotate your head to the right for one count, you should feel a stretching sensation up the left side of your neck. Then rotate your head back for one count, stretching your chin to the ceiling and letting your mouth open. Rotate your head to the left for one count, then drop your head to your chest for one count.

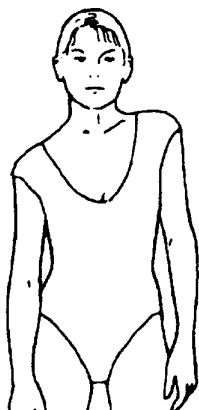


SHOULDER LIFTS

Lift your right shoulder toward your ear for one count. Then lift your left shoulder up for one count as you lower your right shoulder.

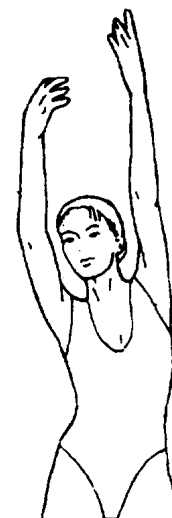

SIDE STRETCHES

Open your arms to the side and lift them until they are over your head. Reach your right arm as far toward the ceiling as you can for one count. Repeat this action with your left arm.

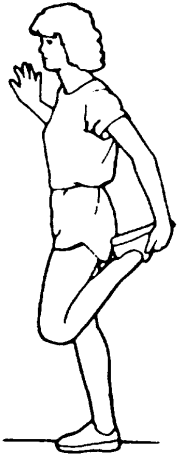


QUADRICEPS STRETCH

With one hand against a wall for balance, reach behind you and pull your right foot up. Bring your heel as close to your buttocks as possible. Hold for 15 counts and repeat with left foot.

INNER THIGH STRETCH

Sit with the soles of your feet together and your knees pointing outward. Pull your feet as close to your groin as possible. Gently push your knees toward the floor. Hold for 15 counts.


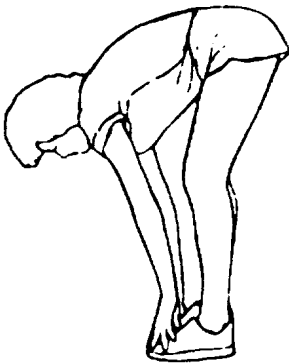


TOE TOUCHES

Slowly bend forward from your waist, letting your back and shoulders relax as you stretch toward your toes. Reach as far as you can and hold for 15 counts.

HAMSTRING STRETCHES

Extend your right leg. Rest the sole of your left foot against your right inner thigh. Stretch toward your toe as far as possible. Hold for 15 counts. Relax and then repeat with left leg.

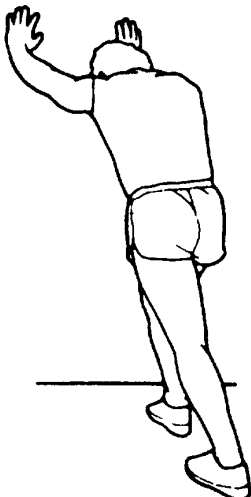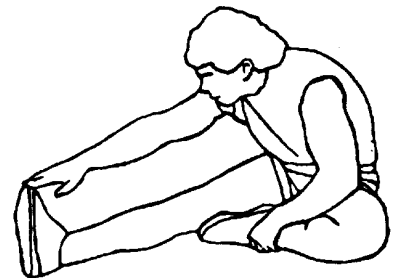

CALF/ACHILLES STRETCH

Lean against a wall with your left leg in front of the right and your arms forward. Keep your right leg straight and the left foot on the floor; then bend the left leg and lean forward by moving your hips toward the wall. Hold, then repeat on the other side for 15 counts.